



FUJI NDT SYSTEMS

"From the desk of Terry Plasek"

2-23-98

To: Billy Wood

From: Terry Plasek

Subject: Maintenance Instructions for the Autofeeder

Billy, I did find some printed maintenance instructions for the Autofeeder. They are very simple and as follow:

1. Keep the front cover closed when Autofeeder is not in use.
2. Brush the inside area of the Film Loading Tray occasionally to remove dust and any debris. A soft brush with an anti-static treatment is recommended.
3. Suction Cups: To prevent film fog and film "dropping", clean and replace suction cups using the following schedule:

Cleaning - Once a month, using slightly wet soft cotton cloth.

Replacement - Once a year. Replace all cups with new parts.

END

Autofeed Maint
autfed.mnt