MXR-160/22



Product Description


The MXR-160/22 is an unipolar water-cooled tube assembly with integrated radiation protection. It comprises dual focal spot, a tungsten anode and a directional beam. The tube is specifically designed for non-destructive imaging applications.

Product Specifications


Nominal tube voltage160 kV
Continuous rating
Focal spot acc. EN 12543 $d = 1.0 \text{ mm} \mid d = 5.5 \text{ mm}$
Focal spot acc. ASTM E1165-12N/A
Filament current, max
Filament voltage, typical
Inherent filtration
Target materialW
Target angle
Radiation coverage
Leakage radiation, max. at loading factors in 1m distance2.5 mSv/h (160 kV; 19 mA)
Weight
Terminal type
Gapping spring-loaded HV-cable2 rings visible (~7 mm)
Gapping non-spring-loaded HV-cable
Grease quantity for HV-cable terminal1.2 ml

Power rating charts

Power rating at given filament current

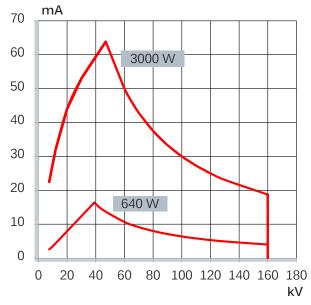


Connection of filament (C = Common)

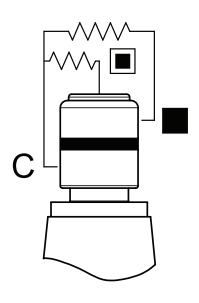

Cooling

Cooling medium	Water
Cooling medium flow, min	4 l/min
Cooling medium temperature at inlet, max	35°C
Pressure at cooling medium inlet, max	6 bar
Post-cooling time after switchoff, min	2 min

Outline drawing

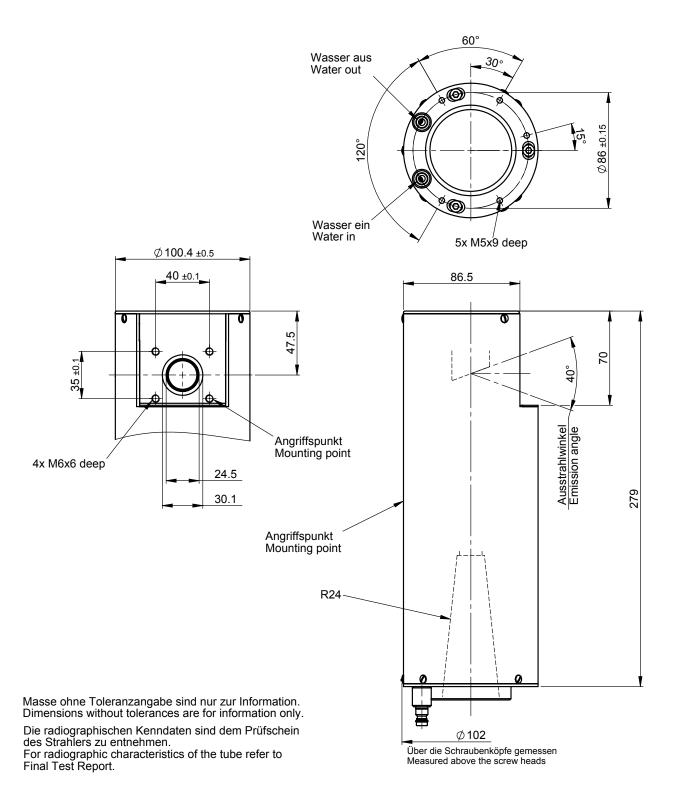

General information

General

The control of the high voltage and the filament current as well as the design of the cooling system and the radiation protection are within the responsibility of the original equipment manufacturer (OEM). For detailed instructions refer to our "X-Ray Tube Manual". Provisions in the generator must assure that the X-Ray tube will be protected against overcurrent, overvoltage and lack of cooling. Otherwise the tube and/or the radiation protection may be damaged and become a hazard.

Cooling

The customer is in charge that the cooling circuit is properly connected to the cooling system. Prior to operating the tube, the coolant must be turned on. Make sure that the coolant flow meets the required cooling conditions. When the tube is switched off, the coolant flow must continue for at least 2 minutes in order to protect the anode and the lead protection from overheating.

Connection of the X-ray tube

High-voltage cables must be installed by trained personnel only. Please proceed with the installation as follows: Cleaning, gapping & greasing (see values page 1), assembly and maintaining. Detailed instructions can be found in our "X-RayTube Manual"

Radiation protection

When installing an X-ray tube assembly into a X-ray equipment and/or operating an X-ray equipment, the responsibility for radiation protection is with the user. Compliance with local regulatory requirements and limit values must be assured. After each tube exchange, repair, modification or upgrade of the unit a radiation protection integrity should be performed. Do not modify the tube assembly itself!

Return of Goods to COMET

Prior to shipment to COMET a Field Failure Report (FFR) will be required. The completed FFR has to be be added to the shipping documents. The FFR can be downloaded from: www.comet-xray.com/Service